



Version 1.4

BARNES&NOBLE

Welcome

Your NOOK, the Barnes & Noble Reader, has many great features designed to give you the best reading experience, including:


- An electronic-ink reading screen that gives you a sharp, clear reading experience like print on paper. This is not a touchscreen.
- A color touchscreen that displays menus and icons, book covers, and a keyboard as needed
- Wireless connectivity (Wi-Fi or Wi-Fi + 3G)

Turning Pages

To turn forward a page, press the lower button on the right or left side of your NOOK. To turn back a page, press one of the upper buttons. **Try it now**: turn to the next page.



When the color touchscreen is unlit, you can swipe your finger to turn pages, just as you would turning the page of a book.

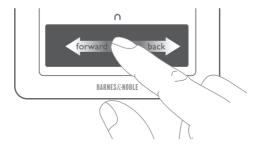

Getting Help


Before explaining more controls, here is how to get help:

- Refer to the User Guide and Tour in the My Documents part of the library on your NOOK. PDF versions are available on the support website.
- **Visit www.nook.com/support**. There you will find video tutorials, blogs, and discussion boards.
- Call Customer Service toll free within the United States at I-800-THE-BOOK (I-800-843-2665). Outside the United States, dial I-20I-438-1834.

Waking your NOOK

Your NOOK sleeps when you are not using it. When it sleeps, it displays a screensaver image (from a predefined set or your own set). To wake it or make it sleep, press and release the **silver power button** on top.

Try it now—press and release the power button, wait until you see the screensaver image, and then press and release again.



Home Button

The small \bigcap between the reading screen and touchscreen is the Home button. Tap it to display the Home menu, the entry point for your NOOK's features. When the touchscreen is unlit, tap it or the Home button to light up the touchscreen.



Try it now—Tap the Home button to display the Home menu. Then tap reading now to return to the Tour.

Menus

Tap touchscreen menus to do things. The scroll bar indicates there are more than four menus. Swipe your finger up and down on the menus to scroll, not on the scroll bar.

<	Find	٩
	Go To	>
	Bookmarks	>
	Font Amasis Medium	>

Try it now—Tap Bookmarks > Add bookmark. **You've just** added a bookmark.

Navigating and Selecting

Tap the \land and \checkmark buttons to move up and down on the reading screen; press and hold the button to skip to the top or bottom of the page. Tap the \bigcirc button to select something, for example, to read it. Tap the \checkmark button to move back through a series of menus or to the source of a link.



Keyboards

When you need a keyboard, your NOOK displays one. Change to uppercase, numbers, and symbols using the keys outlined in black. \blacksquare is the backspace key. Clear clears the form.



Try it now—Tap Find and tap the keys outlined in black above. Type something, and then tap Cancel.

Show Covers

In your library and for search results in the Shop, you can view a gallery of covers. Tap Show Covers. Swipe your finger from side to side to scroll through the gallery. Tap \boxtimes to close the gallery.



Status bar

The top of the reading screen displays a status bar. You see the battery level \square , Wi-FiTM $\widehat{\frown}$ or cellular \blacksquare signal strength (when connected), and the time. In a bookstore, you see **B**&**N**.



Receive exclusive new content in The Daily:

- Brighten your day with Grin & Tonic, a fresh view of the world, crafted exclusively for NOOK readers by prominent writers.
- Daybook presents a digest of B&N review content, an article of the day, and a significant event that occurred on this date in literary history.
- Unbound is a NOOK and B&N eReader blog. Look for daily posts on great new eReads, bestselling eBooks, and eBook offers (including free downloads).

The Daily is also a message center, where you receive notices about new issues of periodicals, offers from friends to lend you eBooks, and notices about free software updates.

//1 Library

Your library gives you easy access to your eBooks, magazines, and newspapers. It has lots of space for eBooks (about 1500), which can be expanded by adding your own microSD card. Your library keeps online back-up copies of all of the eBooks you have purchased from BN.com or your NOOK.

Rate

Your opinion matters. Rate the eBooks and periodical subscriptions that you own. Your ratings help others.



Highlight an item in your library, tap View Item Details & Options, and tap the menu with stars.

9⊟ LendMe[™]

Share your favorite eBooks with friends and family by lending an eBook one time for 14 days.



To lend an eBook, go to your library, select an eBook, and tap Lend.

L Shop

Access the eBookstore at Barnes & Noble.com from your NOOK anytime. The eBookstore has the world's largest selection of electronic books and periodicals. You can:

- Wirelessly purchase and download eBooks.
- Subscribe to newspapers and magazines, or purchase single issues.
- Download and read free samples of eBooks so you can try before you buy.

Items you purchase are charged to your account's credit card and automatically downloaded to your NOOK.

You must register your NOOK to buy anything from the Shop (including free eBooks and samples).



To purchase an eBook, highlight it and then tap Select. Tap Buy and Buy Now to confirm your purchase. Go to My B&N Library to read the eBook. If you do not see it, tap Check for new B&N content.

Reading

You're going to love reading eBooks, magazines, and newspapers on your NOOK. Your NOOK supports ePub and PDB files (like those you'll get from the Barnes & Noble eBookstore), as well as PDF files you can load from your computer using a file manager and the included USB cable.



To read an item in your library, navigate to it and then tap Select.

Your NOOK remembers where you are reading in each eBook or periodical. Tap reading now on the Home menu to pick up right where you left off.

Choose a font and text size

Your NOOK makes reading comfortable by offering a choice of several fonts and six text sizes. Tap Font to change the text font and size.

Look up words

When you come to a word you don't know, look it up in Merriam-Webster's Collegiate® Dictionary, without leaving the page you are reading. Just tap Look up word.

Bookmark and take notes

Bookmark pages you want to refer back to in the future. Highlight interesting passages. Add notes.



To bookmark a page, tap Bookmarks > Add bookmark. To add highlights or notes, tap Highlights and notes and follow the prompts.

Read in stores

Read many eBooks when visiting Barnes & Noble Bookstores free of charge. Read an eBook for up to one hour per day.



Select an eBook in the Shop and tap Read In Store.

Play games

Play games on your NOOK. Chess and Sudoku are included in this release.



Connect your NOOK to Wi-Fi™ hotspots to speed up downloads and browse the World Wide Web. NOOK Wi-Fi has only Wi-Fi connectivity. NOOK has Wi-Fi and B&N Fast & Free Wireless connectivity.

Your NOOK automatically connects to Wi-Fi hotspots in Barnes & Noble stores and to AT&T[™] hotspots. You can connect to other hotspots too.



To connect to a Wi-Fi hotspot, tap wi-fi on the Home menu. Then tap Wi-Fi hotspot and choose the hotspot to connect to.

f Music

Listen to your favorite music while using your NOOK. You can also listen to audiobooks, podcasts, or any other MP3 and OGG files.



To listen to music, tap audio on the Home menu or Open Audio Player from the Reader.



Browse the World Wide Web when connected to a Wi-Fi hotspot. Find a restaurant, Barnes & Noble Bookstore, AT&T hotspot, or a quiet place to read.



Tap settings to personalize your NOOK to suit your taste.

Display: Choosing your own wallpaper and screensavers is a breeze. Pick from preloaded collections, or use USB to load your own images (JPG, GIF, PNG, or BMP) from a computer.

Contacts: Your NOOK can store email addresses of friends and family to help you share great books easily.

Enjoy your NOOK!

You have finished the tour. If the touchscreen is dimmed, tap it to light it up. Tap the \bigcap Home button to use your NOOK.

Barnes & Noble, Inc. 122 Fifth Avenue, New York, NY 10011 USA.

© 2009-2010 Barnes & Noble, Inc. All rights reserved.

NOOK and the NOOK logo are trademarks of Barnes & Noble, Inc. or its affiliates. Patent pending.

Customer Service

You can reach Customer Service toll free within the United States at I-800-THE-BOOK (I-800-843-2665). Outside the United States, dial I-20I-438-1834.

Guide Revision 1.4.0.1